


# Quick Start Guide

## 1. Unpack the Box

Here's what's included:



## Overview

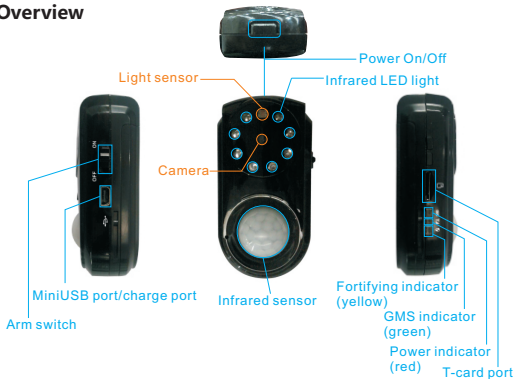


**Note:** Please make sure that all accessories are complete.

## 2. Installing the SIM Card, Battery and Storage Card


Note:

Make sure to always turn off the power before installing or replacing.

### 2.1 Remove the back cover

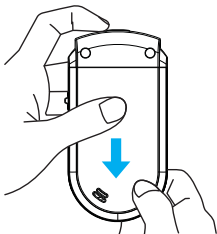


### 2.2 Install the SIM card

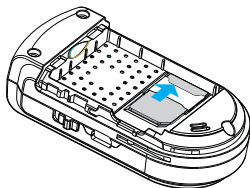

Note:

Make sure there is enough credit on the SIM card and pay attention to the current SIM card GPRS charge.


### 2.3 Install the battery

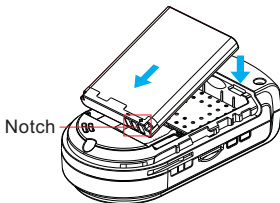

**Note:**

The device is designed to use only manufacturer-specified original batteries and accessories.

## 2.4 Install a SD card

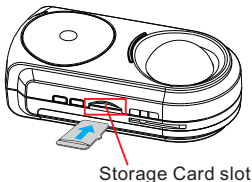

**Note:**

To remove the SD card, press it to eject it from the slot.

## 3. Placement

**3.1** Include the device to the base.

**3.2** Fix the base to the bracket with the base rabbit upward, and then fix the bracket on the wall or other solid object.



### 3.3 Connecting to power

Connect GM01 to power with the included charger, and then the battery is charging automatically.

## 4. Setting Before Use

### Note:

There is no blank in any command.

### 4.1 Add SOS number to device

Power on device, SMS command for adding SOS number to device:

"SOS,A,phone number1,phone number2,phone number3#"

### 4.2 Set APN

SMS command:

"APN,apnname#" OR

"APN,apnname,user,password#"

Eg:"apn,internet,kktcell#" OR

"apn,orange,orange,orange#"

### 4.3 Set Your Time Zone

SMS command:

"GMT,time bearing,time zone#" OR

"GMT,time bearing,time zone,half time zone#"

### Note:

- Timezone selection : E or W;
- Standard Timezone range : 1-12;
- Half-hour Timezone selection : 15, 30, 45

### 4.4 Set MMS

SMS command to set MMS parameters:

"MMS,url,IP,Port,APN,user, pwd,ConnectType#"

OR

"MMS,url,IP,Port,APN#"

Eg:

"mms,http://mms.kktcell.com/cmmssc/post,212.252.169.99,8080,mms.kktcell#"
OR

"mms,http://mms.orange.fr,192.168.010.200,8080,orange,orange,1#"
SMS command to enable MMS Notification:

"MMSON#"
Device would auto reboot after set the MMS, check the GPRS setting after device reboot, confirm APN and MMS setting are right.

"GPRSSET#"
Note:

MMS notification requires the GM01 SIM card to be of GPRS service.

For more please refer to 5. Settings of the User Manual.

## 5. Start Monitoring

After the setting, now you can switch GM01 in ARM mode for monitoring.

SMS command:

"ON#"
SMS is replied to SOS number as: "Alarm fortification success!" in one minute.

Note:

- You can also enable the "ARM" mode by side button manually or by making a call, please refer to 4.1 Arm/Disarm of the User Manual;
- If you don't need to monitor for 24 hours, you can also customize your monitoring period, please refer

- to **4.2 Timing Arm/Disarm** of the User Manual;  
The number of picture capture, video record time and the time interval of two alarm events can be customized via SMS command please refer to 4.3 Infrared Alarm of the User Manual.

## 6. Get Alarm Notification in Multiple Way

### 6.1 SMS Notification

Activate automatically after adding an SOS number.

### 6.2 MMS Notification

Activate by SMS command:

“**MMSON#**”

### 6.3 Dialing Notification

Activate the dialing notification via SMS command:

“**CALLSET,call time#**”

Time: 0-3, 0 means off dialing notification

For example: “**CALLSET,3#**”, success by replying SMS:“ Set Success”

When alarm is triggered, GM01 auto dials to the SOS numbers, user can monitor the live voice after picking up the call.

For more please refer to **4. Functions** of the User Manual.

## 7. Remote Controlling

### 7.1 Photographing

SOS number can take the real time picture via SMS command “**PHOTO#**” or “**333**”, pictures would be sent to SOS number via MMS.

## 7.2 Voice Monitor

When GM01 in ARM mode, it would enable the remote voice monitoring function by picking up the call from SOS number for 10 seconds.

### **Note:**

If alarm triggers when monitoring the voice, device would hang up the call and handle the alarm information first.

For more please refer to **4. Functions** of the User Manual.